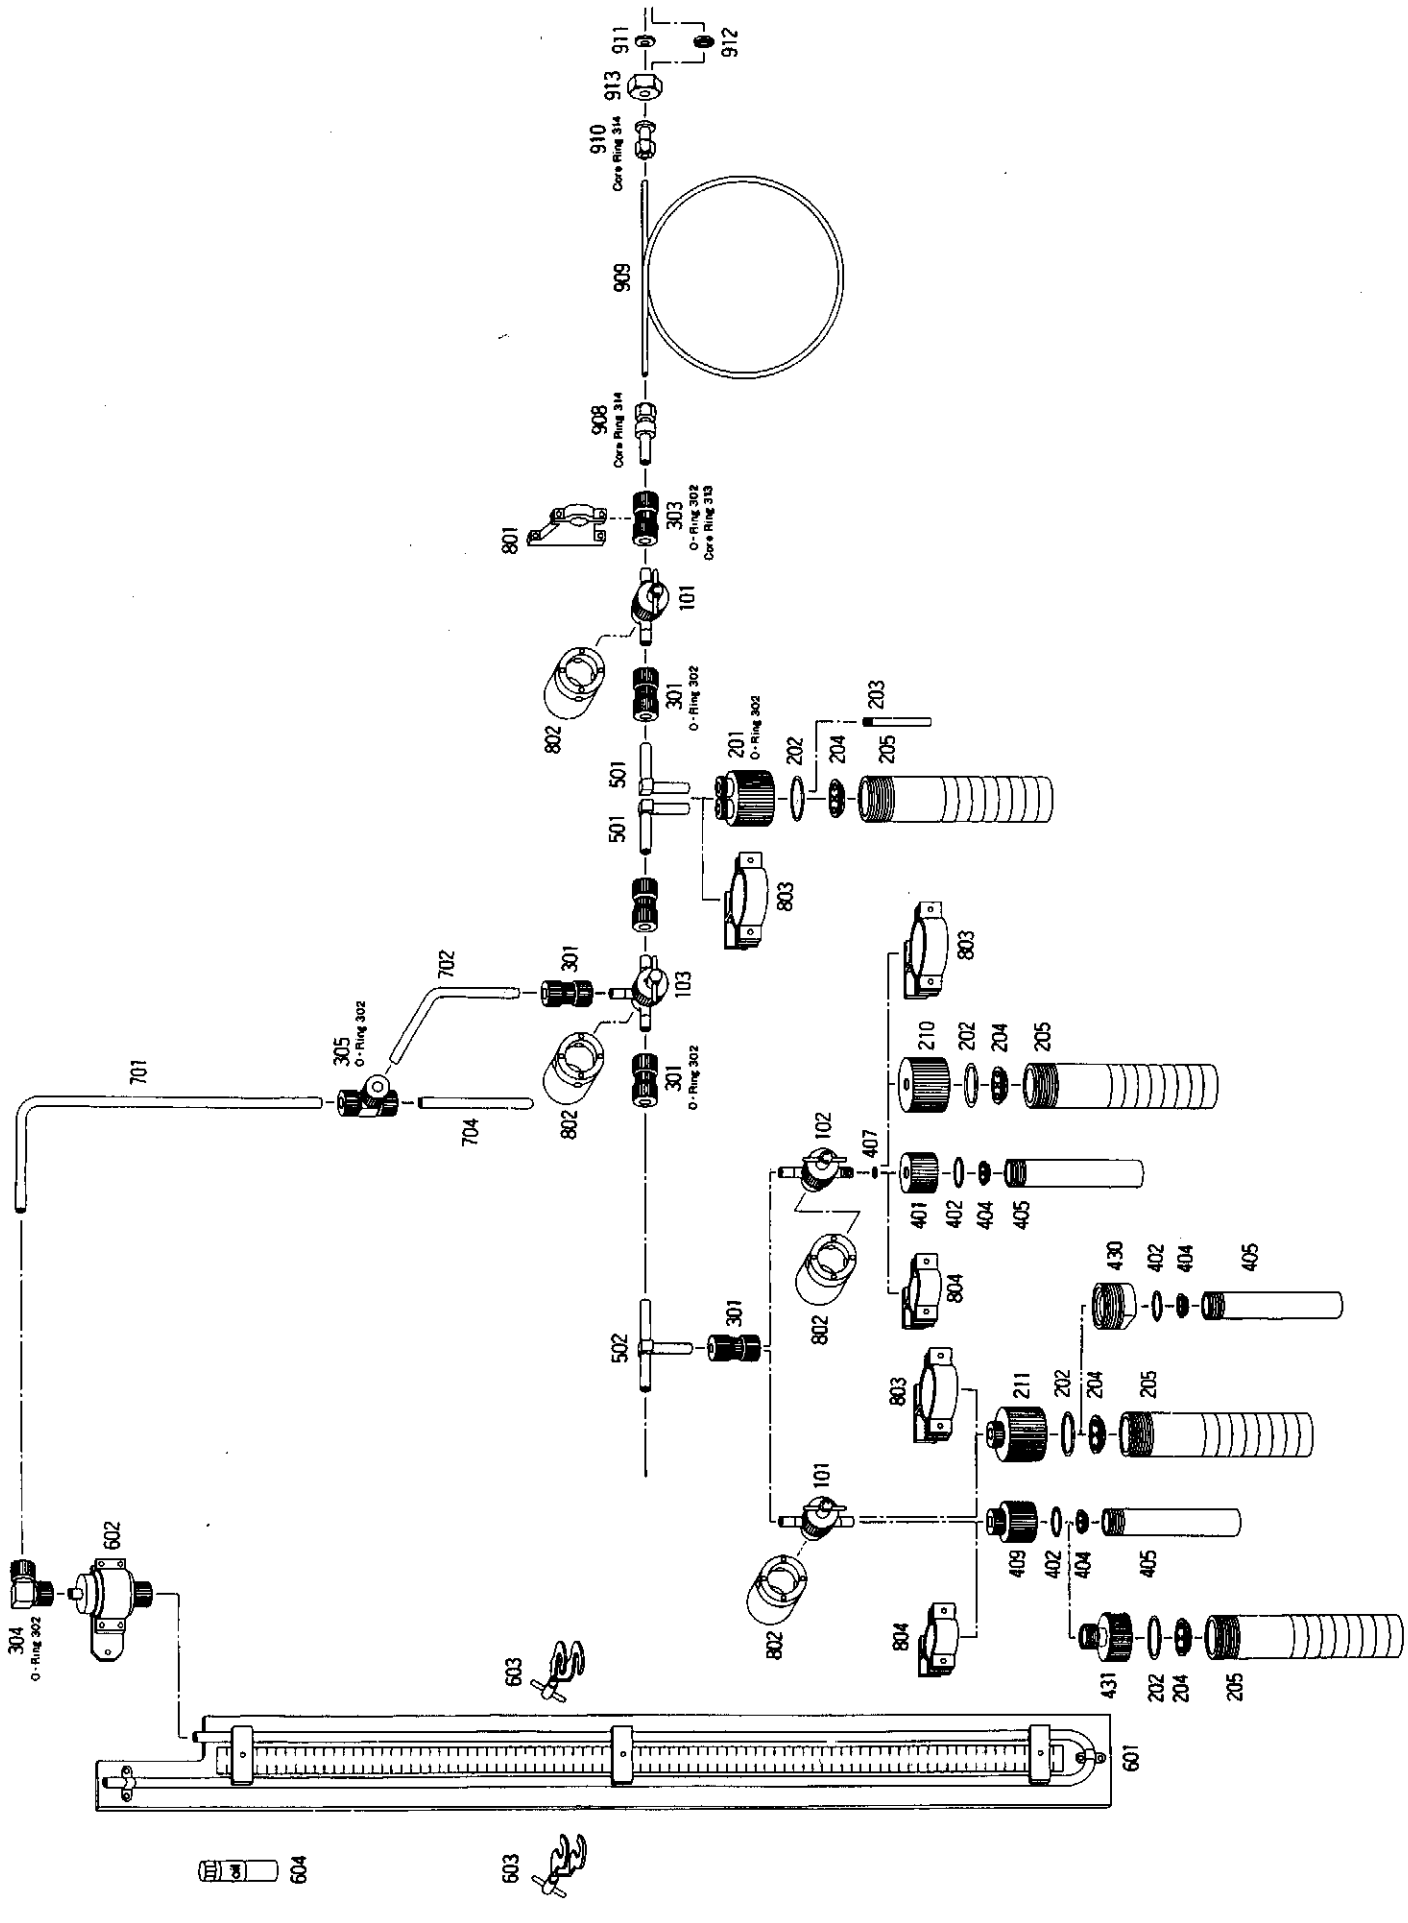Parts Diagram for Type I and II